

## Safety Information

Before using your new pedicure spa, please read and observe these safety instructions carefully to reduce the possibility of fire or injury. For additional questions, please call our Customer Service Representatives at (508)757-0099 - (508)3405776

**WARNING:** It's very important that you carefully follow the basin cleaning procedures on page to ensure that the spa is sanitized after each use. SD is not liable for any infections or disease that may result from improper cleaning or failure to adhere to sanitation requirements.

- This pedicure spa unit should only be operated in a room temperature between 40°F(4°C) and 100°F(38°C).
- Do not use unit outdoors or in excessively humid or dusty environments.
- Do not use unit where aerosol (spray) products are being used or oxygen is being administered.
- Do not operate unit if it has been damaged.
- Always connect this unit to a properly grounded electrical outlet.
- This unit is designed only to operate on a standard 110Volt 60Hz house current.
- Exceeding this standard may cause injury and damage to properly.
- Do not use this unit if noise above normal sound is heard.
- To reduce the risk of burns, fires, and electrical shock, never leave this unit unattended if plugged in and always unplug when not in use for an extended period, before installation, cleaning, or removal of parts.
- Keep the power cord away from heated surfaces.
- Do not operate unit if the power cord or plug has been damaged.
- If this unit is operating abnormally or malfunctioning, immediately turn off the power and disconnect the power cord from the outlet; do not operate unit if it's not working properly.
- In the event of the power failure, always turn the power switch to its OFF position.
- When not in use, always turn the power switch to its OFF position.
- To disconnect unit, turn all controls to OFF position and remove power cord from the outlet.
- Keep all electrical devices away from this unit.
- This unit only has a weight capacity of 250 pounds (113.4kgs).
- Enter and exit the unit slowly and carefully.
- Never drop or insert any object into any opening of the unit.
- Close supervision is necessary when this unit is use by on or near children, invalids and disabled persons.
- Do not stand or allow anyone to stand in the spa basin.
- Please be aware that a spa basin filled with water is a potential drowning hazard.
- Check the water temperature before each use; water temperature should not exceed 105°F (41°C) and water temperature in heater should not exceed 150°F (65°C).
- Disinfect the spa basin and jets, after each use with an approved cleaner.
- Do not massage any area of the body that is swollen, inflamed or covered with skin eruptions.
- Before operating the massage chair, make sure the chair arm are down.
- If there is severe discomfort during the massage, discontinue use and consult a physician.
- Do not use the massage chair for more than 15 minutes at one time.
- Do not put hands or fingers near massage mechanism or rollers while the chair is operating; touching the mechanism can result in injury from the rollers squeezing together.


9

## WORRY FREE SPA PEDICURE

THE ULTIMATE INVENTION FOR HEALTH AND BEAUTY

### SPECIFICATION:

Spa Shell	High density fiberglass, pre-plumbed unit, durable high gloss finish easy to maintain, acetone proof, stain resistance
Tub:	4.0 gallons
Jet Pump:	Ultra Clean BM8000
Jet System	Pipeless System, UL no: E301655
Dimensions:	Tub: 16"H x 26"Wx 50" L Seat: 41"H x 24"W
Weight (Shipping)	105 lbs
Power Source:	120 V, 15Amp, Minimum 4 outlets
Plumbing	Hot & Cold water connected to ½" (UPC) P-TRAP installed with 1.5" PCV pipe

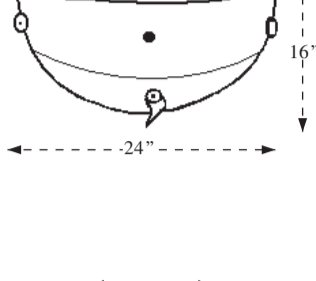



10

## WORRY FREE SPA PEDICURE

### THE ULTIMATE INVENTION FOR HEALTH AND BEAUTY

### SPECIFICATION:

Spa Shell	High density fiberglass, pre-plumbed unit, durable high gloss finish easy to maintain, acetone proof, stain resistance
Tub:	4.0 gallons
Jet Pump:	Ultra Clean BM8000
Jet System	Pipeless System, UL no: E301655
Dimensions:	Tub: 16"H x 26"Wx 50" L Seat: 41"H x 24"W
Weight (Shipping)	105 lbs
Power Source:	120 V, 15Amp, Minimum 4 outlets
Plumbing	Hot & Cold water connected to ½" (UPC) P-TRAP installed with 1.5" PCV pipe

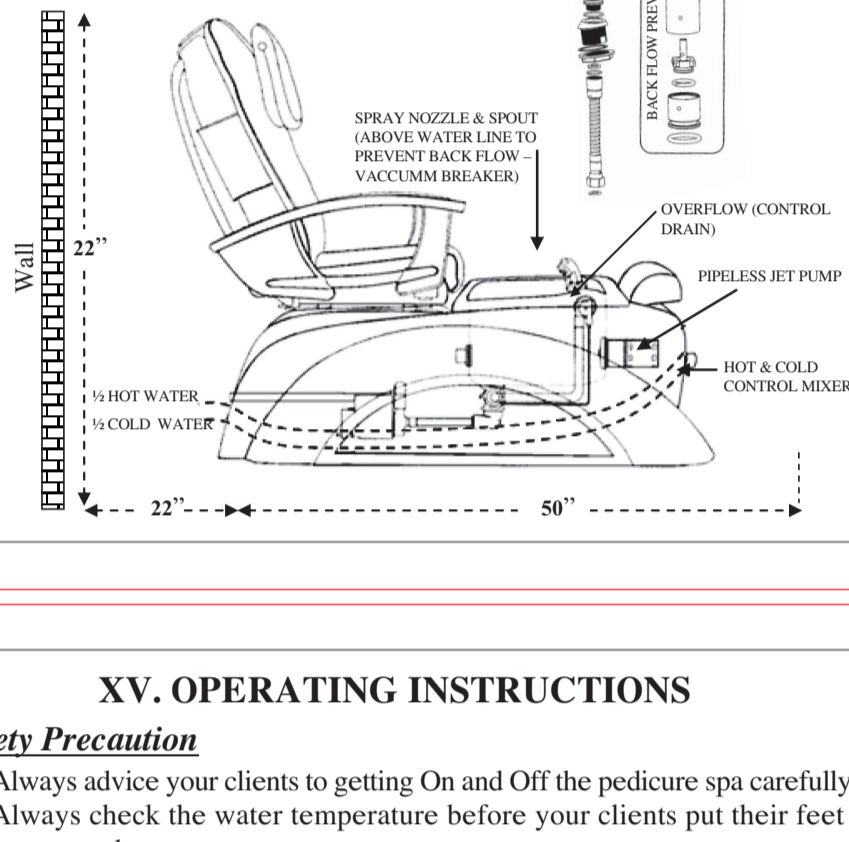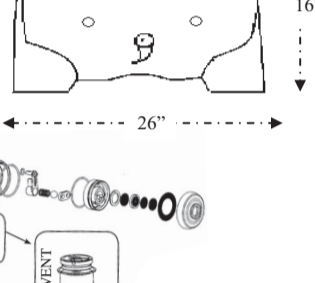

11

## XV. OPERATING INSTRUCTIONS

### Safety Precaution

- Always advice your clients to getting On and Off the pedicure spa carefully.
- Always check the water temperature before your clients put their feet into spa tub.
- Massage Controller and any electrical devices must be kept away from water.
- Before turning ON the Pipeless Jet System, make sure all jets are completely submerged in water. Never run jets dry.
- DO NOT use the pedicure spa if your client is a diabetic, has poor circulation, or if any area of feet or legs are inflamed or have open wounds.
- Consult a physician before using if client has any fungal infection, swelling or fracture.

### Filling Spa Tub

- Turn the over-flow (drain) handle of the spa to close the drain.
- Control temperature of water with single lever faucet on the front of the spa.
- Lift the faucet handle UP to fill the water into the spa tub.
- Make sure water level should be at least 1" above the Pipeless Jets.

### Start Whirlpool

- Press air switch button to turn ON the Pipeless Jet System.
- DO NOT run the whirlpool unless there is adequate water in the spa tub.
- Warranty will be null and void if or when the jets are run dry.

### To Drain

- Press air switch button to turn OFF the Pipeless Jet System.
- Turn the over-flow (drain) handle of the spa to open the drain.
- Water must be thoroughly drained after each use.
- If the pedicure spa has a discharge pump (option), turn ON discharge pump to drain.
- Turn OFF the discharge pump when the water is empty from the tub.
- Sanitize the spa tub after each client.

### Massage Chair Operation

- Please read the Massage Chair Manual for operation.

### WARNING

- **Massage chair is not recommended for pregnant women or children younger than 14 years of age.**

12



## XVII. CARE & MAINTENANCE FOR SPA TUB

### Important Precautions

- Always keep the front face of the BM8000 Jet clean.
- Any blockage or obstructions in the front face will reduce the whirlpool action and may cause damage to the Pipeless Jets.
- To clean the face of the BM8000 Jet, remove the face by turning the front face counter-clockwise; remove any lint or debris behind the cover. Remove the Jet Impeller Assembly; take out the impeller by turning the impeller stopper counter-clockwise and then wash the Jet's cover and Jet assembly with soap.
- To remove stains, use a soft cloth, damp with acetone and gently rub the stain areas.
- Do not use anything that could scratch the surface of the basin.
- Recommended Cleaners are Spic & Span, Fantastic, Mr. Clean, Cascade, 409.

### Clean After Each Customer and at the End of Each Day

1. Drain all water and remove all debris from the pedicure spa tub.
2. Clean the surface and walls of the pedicure spa with soap or detergent using soft cloth.
3. Rinse the spa tub with clean water.
4. To disinfect, use an EPA (Environmental Protection Agency) registered bacterial/ fungicidal disinfectant according to the manufacturer's instructions.
- Remove the Jet Face by turning counter-clockwise as shown in Picture A and Picture B.
- Pull out the Impeller Assembly from the Jet Housing as shown in Picture C.

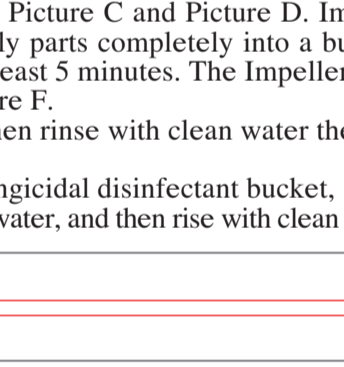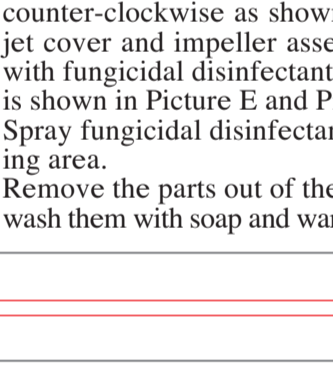


- Take out the Impeller Assembly by turning the Impeller Stopper counter-clockwise as shown in Picture C and Picture D. Immerse the jet cover and impeller assembly parts completely into a bucket filled with fungicidal disinfectant at least 5 minutes. The Impeller Assembly is shown in Picture E and Picture F.
- Spray fungicidal disinfectant then rinse with clean water the Jet Housing area.

5. Remove the parts out of the fungicidal disinfectant bucket, wash them with soap and warm water, and then rise with clean water.

13

## IMPORTANT NOTE:

**Make sure to put Impeller Gasket back to its place.**

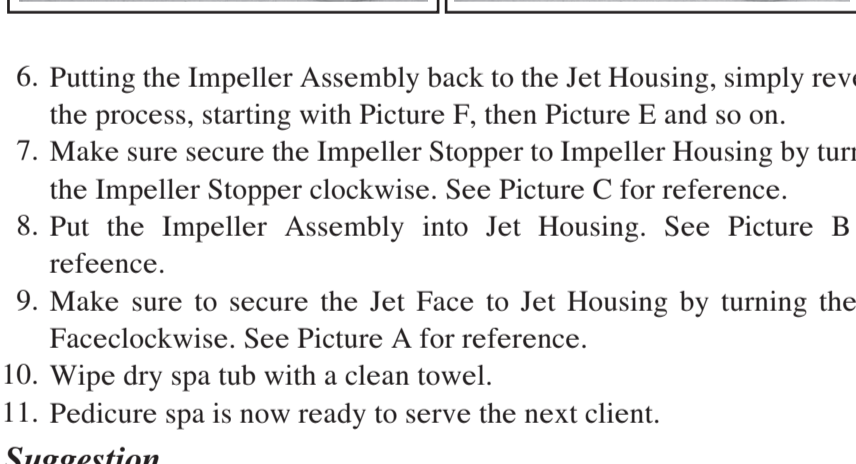

6. Putting the Impeller Assembly back to the Jet Housing, simply reverse the process, starting with Picture F, then Picture E and so on.
7. Make sure secure the Impeller Stopper to Impeller Housing by turning the Impeller Stopper clockwise. See Picture C for reference.
8. Put the Impeller Assembly into Jet Housing. See Picture B for reference.
9. Make sure to secure the Jet Face to Jet Housing by turning the Jet Face clockwise. See Picture A for reference.
10. Wipe dry spa tub with a clean towel.
11. Pedicure spa is now ready to serve the next client.

### Suggestion

We recommend that good quality car or boat wax be applied occasionally, this will preserve the gloss of the pedicure spa tub and will make the cleaning easier.

14

## MANUAL SPA CHAIR INSTALLATION



**Install the manual chair onto spa tub is as simple as the following steps:**

1. Open the boxes contain the Pedicure Spa Tub and the Pedicure Chair.
2. Install the chair onto spa tub by guiding 4 studs underneath of the sliding rails onto the 4 pre-drilled holes on spa tubs.
3. Using provided hardware to secure the chair onto spa tub,
4. Install both arms of the chair from the package to the frame of the chair, using provided hardware.
5. Connect Air Tubing from the Air Pump to the seat bottom as shown in Picture 6 below.

## AUTO SPA CHAIR INSTALLATION

**Follow this Installation Guide to install the Auto Pedicure Chair onto the Pedicure Spa Tub**


1. Open the Pedicure Chair package.
2. Remove Motor A and Motor B from the box and place Motor A and Motor B at the location as shown in Picture 1.
3. Install "M" Motor Bracket onto the Pedicure Spa Tub as shown in Picture 1.

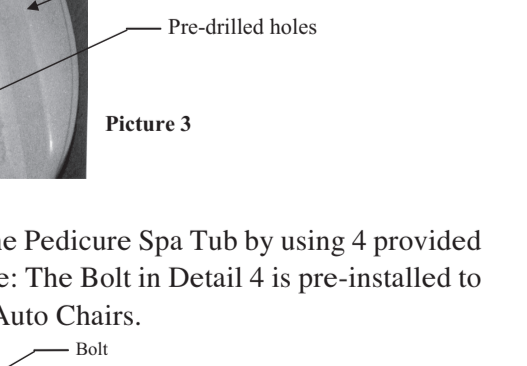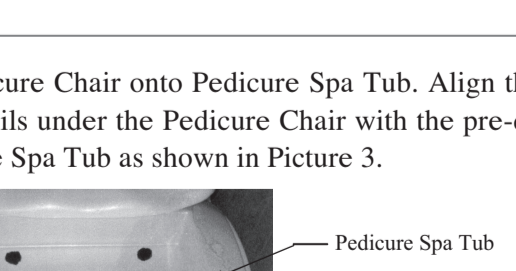


4. Install the Movement Motor (Motor A, marked red) to the "M" Motor Bracket. Make sure to secure the motor to the bracket with the Locking Pin as shown in Pictures 1 & 2.

15

5. Place the Pedicure Chair onto Pedicure Spa Tub. Align the mounting holes of the Rails under the Pedicure Chair with the pre-drilled holes on the Pedicure Spa Tub as shown in Picture 3.

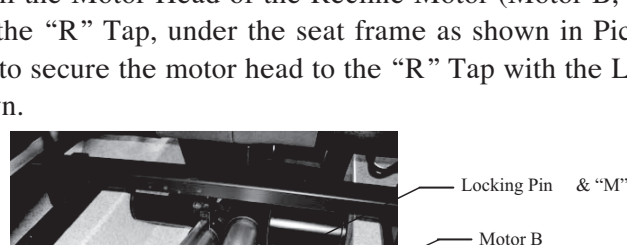

6. Secure the Pedicure Chair to the Pedicure Spa Tub by using 4 provided bolts as shown in Detail 4. Note: The Bolt in Detail 4 is pre-installed to the Mounting Rail on all new Auto Chairs.

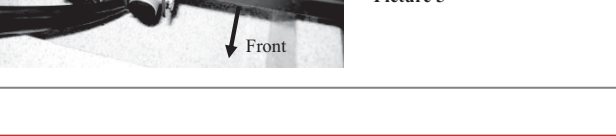

7. Install Recline Motor Body (Motor B, marked blue) into "C" Tap as shown in Picture 2. "C" Tap is located at the bottom of the Pedicure Chair's Back Section as shown in Picture 2.
8. Install the Motor Head of the Recline Motor (Motor B, marked blue) into the "R" Tap, under the seat frame as shown in Picture 5. Make sure to secure the motor head to the "R" Tap with the Locking Pin as shown.



16